Straight Bath Supply | Cat. No. 5577

INSTALLATION INSTRUCTIONS

Parts Included

• 4 Cone Washers • 2 Decorative Locknuts • 2 Supply Tubes •
• 2 Escutcheons • 2 Locknuts •

Tools Needed

• Adjustable Wrench • Set of Crescent Wrenches • Pliers • Teflon Tape (use as a sealant on all male threaded tubing) •

This water supply tube kit includes the parts listed above ONLY. The faucet must be purchased separately.

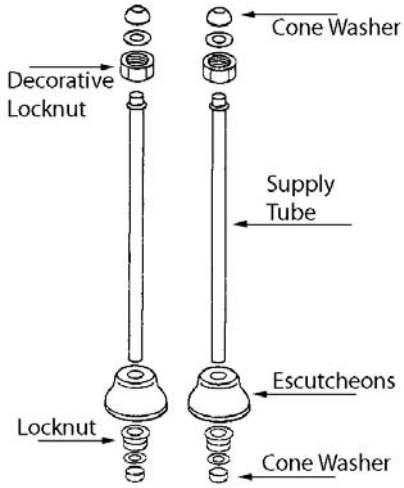

To Assemble Tubes

1. First be sure to shut off the the water supply. Remove old water supply tubing. Put a cone washer, with the wide end of the washer inward, onto the upper end of each supply tube.

2. Slide a decorative locknut up to the top of each supply tube and put on a cone washer.

3. On the bottom of each supply tube, slide one of the escutcheons up the tube partway, then slide the locknut up the end of each tube directly under the escutcheon.

4. Put another cone washer with the wide end of the washer upward onto the bottom end of the tube.

To Install Tubes

1. Attach the bottom end of each supply tube to the water supply tubing in your floor by screwing the locknut down tightly. Let the escutcheons slide down to the floor.

2. Attach the upper end of one supply tube to the “cold side” faucet supply tube located on the rear of your tub by inserting the supply tube into the faucet supply tube and tightly screw the decorative locknut over the two for a tight fit.

3. Repeat steps 1-2 using the other supply tube and connecting it to the “hot side” faucet supply tube.

NOTE: Please seek professional help if you have copper plumbing in your home.

Cleaning Instructions

Wipe this whole set off with warm water and a soft cloth. DO NOT use soaps, cleansers, or brass cleaners as they will disintegrate the protective lacquer coating and leave the brass exposed causing it to tarnish.

P 847•244•1234 | www.barclayproducts.com